




iMac Intel 21.5" EMC 2428 Hard Drive Replacement

Prereq only.


Written By: Walter Galan

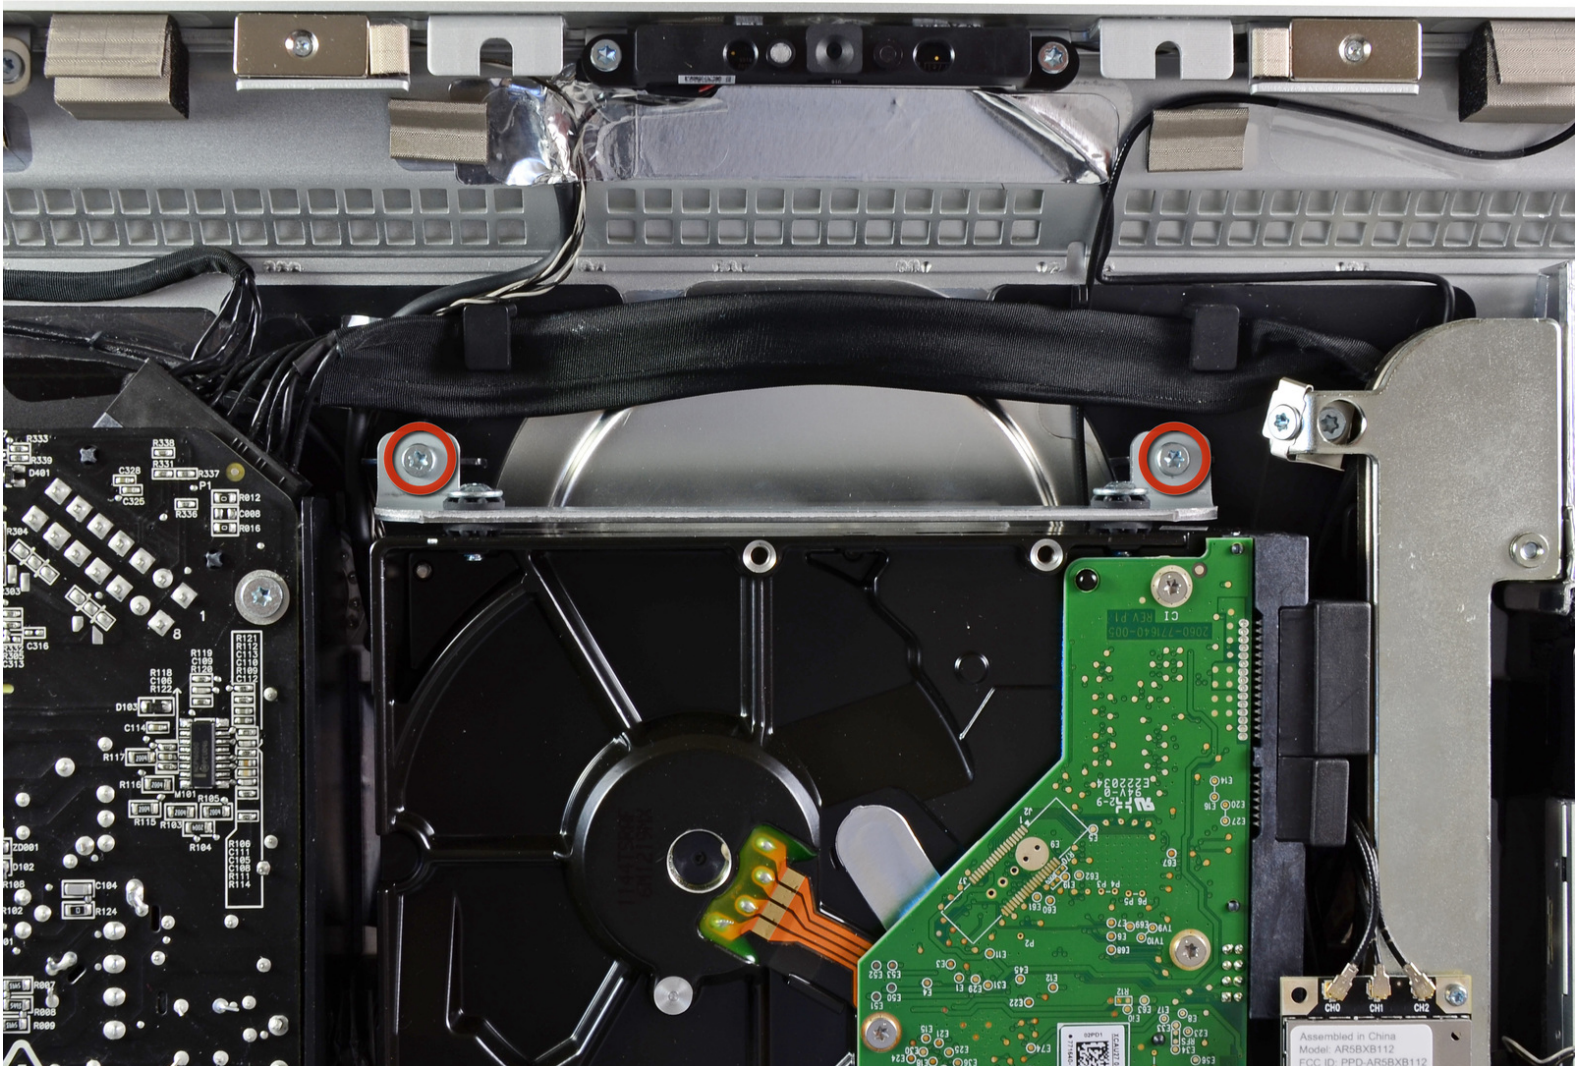

INTRODUCTION


Prereq only.

Step 1 — Hard Drive

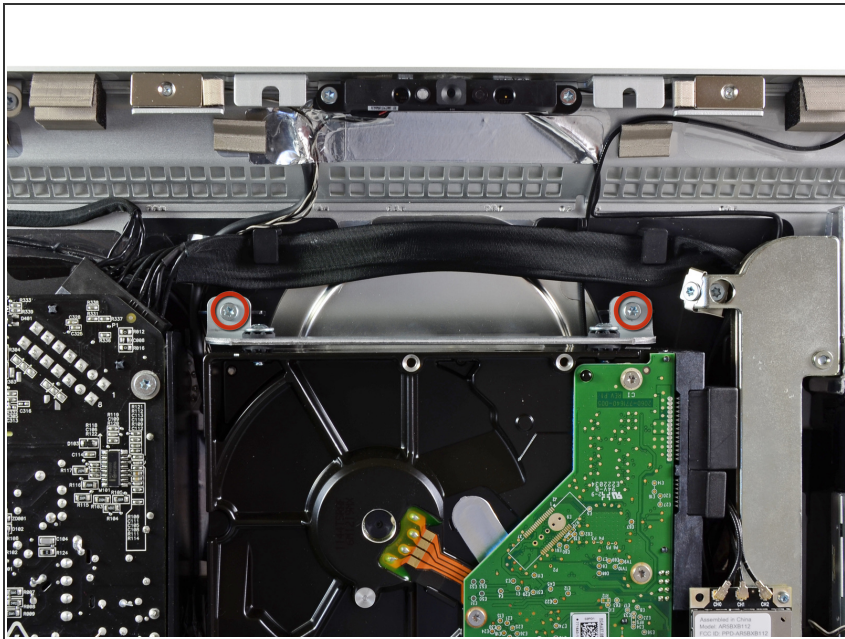

- Remove the two 9 mm T10 Torx screws securing the upper hard drive bracket to the outer case.


Step 2

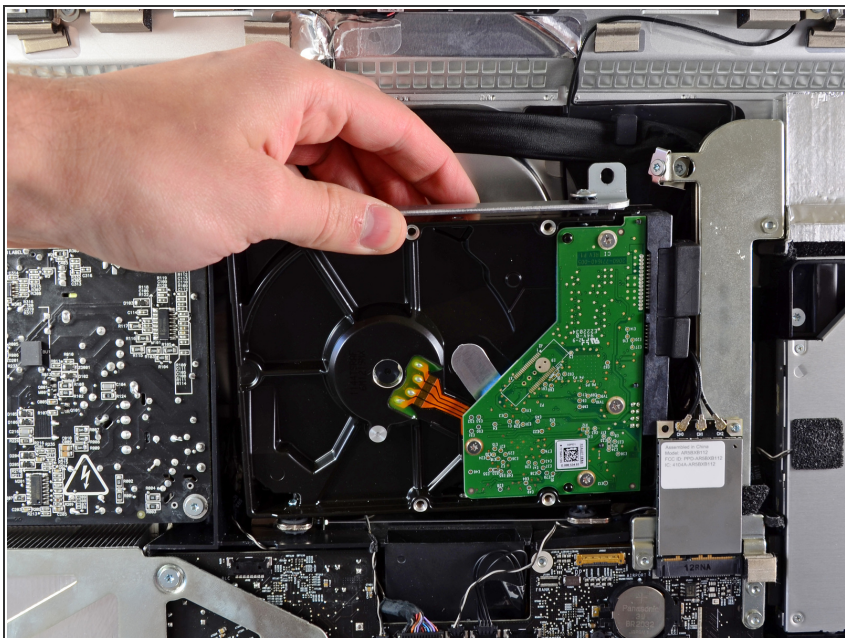

- Slightly rotate the hard drive out of the outer case and lift it up off its mounting pins toward the top edge of the iMac.

⚠ Be careful not to contact the AirPort card as you lift the hard drive out of its recess.

Step 3

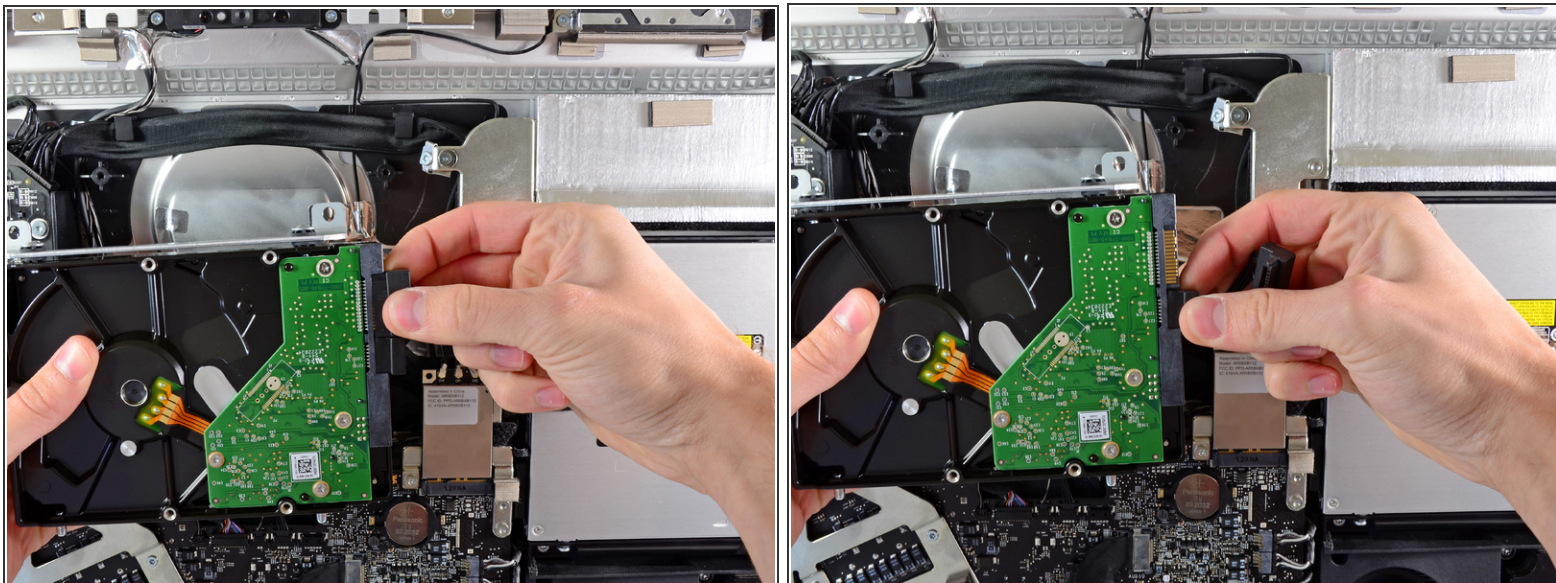

- Disconnect the SATA data cable and SATA power connector from their respective sockets by pulling each connector away from the hard drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 01:25:06 AM.